Some Important Points

- The Cellsafe® **Radi Chip**™ is designed to be applied only once. Once fitted, it should not be removed as this can damage the internal structure.
- The Cellsafe® **Radi Chip**™ should not be tampered with in any way or cut down to a smaller size. The internal structure inside the Cellsafe® **Radi Chip**™ has been engineered to strict standards. Correct placement of the Cellsafe® **Radi Chip**™ is essential for optimum performance.
- The Cellsafe® **Radi Chip**™ is slim enough to fit inside all mobile phone cases however it should not be used with aluminium mobile phone cases or mobile phone cases made wholly or partly from any metal as this may affect the performance of the product.

Instructions on how to apply the Cellsafe® Radi Chip™

cellsafe®

Radi Chip™

Reducing exposure
from mobile phone radiation

www.cellsafe.com.au

Please read these instructions carefully before applying your Cellsafe® **Radi Chip**™ to your phone as correct placement of the **Radi Chip**™ is essential. Before you begin you must ensure the back of the phone is clean and free of any dirt, dust, lint or oils from your hand. Failure to properly clean the back of your phone may mean the Cellsafe® **Radi Chip**™ does not properly adhere to your phone.

1) Please clean the back of your phone with a non-abrasive cleaner, we recommend using an alcohol swipe. You should also ensure your hands are clean before you begin. The back of your phone must then be dry.

2) Slowly peel the adhesive backing paper from the Cellsafe ® **Radi Chip**™.

3) Gently and carefully adhere the Cellsafe® **Radi Chip**™ to the back of your phone aligning it in accordance with the placement diagram for your model of phone.

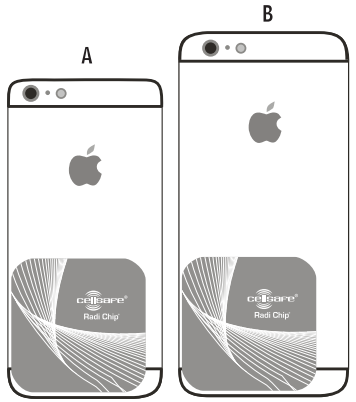

A
Chip position
on iPhone 6

B
Chip position
on iPhone 6 Plus

This Chip is suitable for iPhone 6 and 6 Plus only.

IMPORTANT: Your Radi-Chip must not be exposed to extreme heat or moisture, both of these can cause serious damage to the chip.